

Quick Start Guide

## BARTEC ET60/65<sup>EX2</sup> Windows Tablet

Type B7-T2E2-\*W\*\*/\*\*\*\*\*



Subject to technical changes. Changes, mistakes, and printing errors do not substantiate any claim to damages.

# TABLE OF CONTENT

|          |                                                      |           |
|----------|------------------------------------------------------|-----------|
| <b>1</b> | <b>Basic safety information</b>                      | <b>4</b>  |
| 1.1.     | Information on this Quick Start Guide                | 4         |
| 1.2.     | Handling the Device                                  | 6         |
| 1.3.     | Intended Use                                         | 6         |
| 1.4.     | Duties of the operator                               | 6         |
| 1.5.     | Safety information                                   | 6         |
| 1.6.     | Maintenance                                          | 7         |
| 1.7.     | Explosion protection marking and standards           | 7         |
| 1.8.     | Warranty                                             | 8         |
| 1.9.     | Co-applicable documents                              | 9         |
| <b>2</b> | <b>Regulatory information</b>                        | <b>9</b>  |
| 2.1.     | Health and safety recommendations                    | 9         |
| 2.2.     | Radio frequency (RF) exposure guideline              | 11        |
| 2.3.     | Optical devices                                      | 11        |
| 2.4.     | Batteries                                            | 12        |
| 2.5.     | Regulatory labels                                    | 13        |
| <b>3</b> | <b>Device description</b>                            | <b>14</b> |
| 3.1.     | BARTEC ET60/65 <sup>EX2</sup> Windows Tablet         | 14        |
| 3.2.     | Purpose of use                                       | 14        |
| <b>4</b> | <b>Hardware features</b>                             | <b>15</b> |
| <b>5</b> | <b>Technical data</b>                                | <b>19</b> |
| 5.1.     | Explosion protection                                 | 19        |
| 5.2.     | Technical specifications                             | 20        |
| 5.3.     | Battery                                              | 23        |
| 5.4.     | Device labelling                                     | 24        |
| <b>6</b> | <b>Transport and storage</b>                         | <b>27</b> |
| 6.1.     | Transport                                            | 27        |
| 6.2.     | Storage                                              | 27        |
| <b>7</b> | <b>Commissioning and operation</b>                   | <b>28</b> |
| 7.1.     | Handling in hazardous areas                          | 29        |
| 7.2.     | First steps                                          | 30        |
| 7.3.     | Inserting a Nano SIM card                            | 31        |
| 7.4.     | Replacing the Battery                                | 34        |
| 7.5.     | Using Lock Screws in hazardous areas                 | 35        |
| 7.6.     | Charging the Device/the battery                      | 37        |
| 7.7.     | Using the Camera                                     | 39        |
| 7.8.     | Reading NFC cards                                    | 39        |
| 7.9.     | Scanning with the scanner                            | 40        |
| <b>8</b> | <b>Troubleshooting</b>                               | <b>41</b> |
| 8.1.     | Restarting the Device                                | 41        |
| 8.2.     | System properties revert to a previous point in time | 42        |
| 8.3.     | Factory Reset via Recovery                           | 42        |
| 8.4.     | New installation of operating system                 | 43        |
| <b>9</b> | <b>Disposal</b>                                      | <b>43</b> |

# 1 Basic safety information

## 1.1. Information on this Quick Start Guide



### **Read carefully before putting the devices into operation**

The Quick Start Guide is a fixed part of the BARTEC ET60/65<sup>EX2</sup> Windows Tablet (hereinafter referred to as “Device”). It must be kept in the direct vicinity of the Device. Installation, operations, and service staff must also have access to the Quick Start Guide at all times.

The Quick Start Guide contains important information, safety instructions, and test certificates, which are necessary for the Device to function properly and safely.

The Quick Start Guide is directed at all individuals concerned with the commissioning, handling, and servicing of the Device. The applicable guidelines and standards for areas with gas and dust atmosphere (EN/IEC 60079-17, EN/IEC 60079-19) must be observed when conducting this work.

Knowledge of the safety and warning information in this Quick Start Guide and the strict compliance with it is essential for safe installation and commissioning. Accidents, injuries, and material damage can be avoided by careful handling and systematically following the instructions.

The examples, tables, and figures provided in this Quick Start Guide are for illustration purposes. Due to the different requirements of the respective application, BARTEC cannot assume responsibility or liability for actual use based on the examples and figures.

BARTEC reserves the right to carry out technical changes at any time. In no event will BARTEC be responsible or liable for indirect or consequential damages resulting from the use or application of this Quick Start Guide.

Safety and warning information is particularly emphasised in this Quick Start Guide and marked by symbols.

**DANGER**

**DANGER** describes a directly imminent danger. If not avoided, death or severe injury will be the consequence.

**WARNING**

**WARNING** describes a possibly imminent danger. If not avoided, death or severe injury may be the consequence.

**CAUTION**

**CAUTION** describes a possibly imminent danger. If not avoided, mild or slight injury may be the consequence.

**ATTENTION**

**ATTENTION** describes a possibly damaging situation. If not avoided, the plant or objects in its vicinity may be damaged.



Important information on effective, economical, and environmentally compliant handling.

### 1.1.1 Languages

The Quick Start Guide is available in German and English. Translation to other languages is available upon request.

### 1.1.2 Changes in the document

BARTEC reserves the right to change the content of this document without notice. In the case of legal disputes, our General Terms and Conditions for Deliveries and Services apply ([bartec.com/general-terms-and-conditions-for-deliveries-and-services](https://bartec.com/general-terms-and-conditions-for-deliveries-and-services)). The current versions of the datasheets, certificates, and declarations of conformity can be downloaded from [bartec.com](https://bartec.com).

1.1.3 Registered trademarks

|            |                                                                                              |
|------------|----------------------------------------------------------------------------------------------|
| Bluetooth® | is a registered trademark of Bluetooth Special Interest Group                                |
| Wi-Fi      | is a registered trademark of Wi-Fi Alliance, an association of manufacturers founded in 1999 |

1.2. Handling the Device

The Device, which is described in this Quick Start Guide, underwent quality and functional tests before leaving the factory to ensure it functions properly and safely. To maintain these conditions and ensure the correct and safe operation of the Device, it may only be transported, stored, and operated in the manner described by the manufacturer.

1.3. Intended Use

The Device is a handheld piece of electrical equipment. It serves the purpose of the mobile recording, processing and/or radio transmission of data within hazardous areas. It can be used exclusively in combination with devices that comply with the requirements in the overvoltage category I. The admissible operating data of the device must be considered. Any other use is unintended and may lead to damage and accidents. The manufacturer shall not be liable for any use extending beyond the Intended Use.

1.4. Duties of the operator

The operator undertakes to only permit persons to work with the Device who are acquainted with the basic regulations on safety and accident prevention, and who have been inducted in the use of the Device, have read and understood the documentation, the safety chapter and the warnings. The operator checks that the safety and accident prevention regulations applicable to the respective case of use have been observed.

1.5. Safety information

- Do not dry wipe or clean the Device in hazardous areas
- Do not open the Device in hazardous areas
- Do not replace or charge battery in hazardous areas
- General statutory provisions or guidelines on occupational health and safety, accident prevention provision, and environmental protection laws must be heeded, e.g. Operational Safety Ordinance (BetrSichV) and nationally applicable ordinances

- Use suitable clothing and shoes with respect to the danger of hazardous electrostatic charges
- Avoid heat influences outside the specified temperature range
- Protect the Device from external influences! Do not expose the Device to caustic/aggressive liquids, vapours or spray
- In the case of malfunction or damaged enclosure and/or display, remove the Device immediately from the hazardous area and bring it to a safe place

## 1.6. Maintenance

The pertinent installation and operating provisions for electrical systems must be observed (e.g. Directive 2014/34/EU, BetrSichV, nationally applicable ordinances EN/IEC 60079-14 and the series DIN VDE 0100)!

Observe the national waste disposal regulations when disposing of the Device.

### 1.6.1 Servicing

Regular servicing of the Device is not necessary if used according to the instructions and operating conditions specified in this guide.

### 1.6.2 Inspection

According to EN/IEC 60079-17 and EN/IEC 60079-19 the operator of electrical systems in hazardous areas is obliged to have these inspected by an electrician to ensure correct condition.

### 1.6.3 Repairs

Repairs to explosion-protected devices may only be performed by authorised personnel with original spare parts and according to the state of the art. Therefore, all repairs to the Device have to be conducted by BARTEC. Contact information and instructions for repair requests and processing can be found at [bartec.com/service-support/returns-repair](https://bartec.com/service-support/returns-repair) under "Automation and Enterprise Mobility".

### 1.6.4 Commissioning

It must be checked that all components and documents are available before commissioning.

## 1.7. Explosion protection marking and standards

Labels with explosion protection marking and certificate number are attached to the Device. Further details on the content of the labels can be found in chapter [5 Technical data](#).

The standards and guidelines for devices and protected systems for intended use in hazardous areas, which are applicable to the Device can be found in the Declaration of Conformity.

## 1.8. Warranty

### WARNING



No changes or retrofits may be made without the written consent of the manufacturer.

If non-specified components are used, the explosion protection will no longer be guaranteed. In the case of externally procured parts, it is not guaranteed that these have been designed and manufactured in accordance with their load and requisite safety.

- Contact the manufacturer before any changes or retrofits to receive a release. Only use original spare parts from BARTEC.



BARTEC shall assume the complete warranty exclusively for spare parts ordered from BARTEC.

BARTEC's General Terms and Conditions for Deliveries and Services ([bartec.com/general-terms-and-conditions-for-deliveries-and-services](https://www.bartec.com/general-terms-and-conditions-for-deliveries-and-services)) shall apply in principle. The duration of the manufacturer warranty is one (1) year for the Device and six (6) months for the battery and accessories starting from the date of transfer of risk, as defined in BARTEC's General Terms and Conditions.

The manufacturer warranty covers all parts of the delivery and shall be restricted to the free replacement or repair of the defective parts in our repair centers. For this purpose, any packaging supplied must be kept where possible. In the case of warranty, the goods must be returned to BARTEC after written agreement using the return merchandise authorization (RMA) form. This Quick Start Guide contains all important information on the subject of explosion protection.

## 1.9. Co-applicable documents

| Document BARTEC                                              | Explanation                                                                                                               |
|--------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Datasheet<br>BARTEC ET60/65 <sup>EX2</sup><br>Windows Tablet | This technical data sheet contains the most important explosion-relevant technical data as well as general technical data |
| Document ZEBRA                                               | Explanation                                                                                                               |
| Quick Start Guide<br>ET6xW                                   | Instructions for commissioning, operating, configuring, programming and maintaining of the Tablet.                        |
| Product Reference Guide (en)<br>ET6xW                        |                                                                                                                           |



All documents are available online.

Documents BARTEC: [bartec.com](https://www.bartec.com) / Documents ZEBRA: [zebra.com](https://www.zebra.com)

In the event of an overlaps with Zebra, the instructions of BARTEC apply.

## 2 Regulatory information

All BARTEC devices are designed to be compliant with the rules and regulations of the location where they are sold and will be labeled as required. Any changes or modifications to BARTEC equipment, not expressly approved by BARTEC, could void the user's authority to operate the equipment.



### CAUTION

Only use BARTEC approved accessories and batteries.

DO NOT charge the Device or batteries when they are damp or wet. All components must be dry before connecting to an external power source.

### 2.1. Health and safety recommendations

#### 2.1.1 Ergonomic recommendations

In order to avoid or minimize the potential risk of ergonomic injury, always follow good ergonomic workplace practices. Consult with your local Health and Safety Manager to ensure that you are adhering to your company's safety programs to prevent employee injury.

### 2.1.2 Vehicle installation

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (including safety systems). Position the Device within easy reach. The user should be able to access the Device without removing their eyes from the road.



Before installing or using the Device in a vehicle, check national and local laws regarding distracted driving.

### Safety on the Road

Give your full attention to driving. Obey the laws and regulations on the use of wireless Devices in the areas where you drive. The wireless industry reminds you to use your Device safely when driving.

#### 2.1.3 Restricted use locations

Remember to observe restrictions and obey all signs and instructions on the use of electronic devices in restricted use locations.

#### 2.1.4 Safety in hospitals and aircraft

Mobile devices transmit radio frequency energy that may affect medical electrical equipment and aircraft operation. Mobile devices should be switched off wherever you are requested to do so in hospitals, clinics, healthcare facilities or by airline staff. These requests are designed to prevent possible interference with sensitive equipment.

#### 2.1.5 Medical devices

It is recommended that a minimum separation distance of 20 cm (8 inches) be maintained between a mobile device and a medical devices such as pacemakers, defibrillator, or other implantable devices to avoid potential interference with the medical device. Pacemaker users should keep the Device on the opposite side of the pacemaker or turn OFF the Device if interference is suspected. Consult with your physician or the manufacturer of the medical device before operating the device.

2.2. Radio frequency (RF) exposure guideline



**CAUTION - Reducing RF Exposure – Use Properly**

The Device complies with internationally recognized standards related to human exposure to electromagnetic fields. Use only BARTEC tested and approved accessories to ensure RF exposure compliance.

To satisfy RF exposure requirements, this Device must operate with a minimum separation distance of 1 cm or more from a user’s body and nearby persons.

2.3. Optical devices

2.3.1 Laser

Class 2 laser scanners use a low power, visible light diode. The user should avoid staring directly into the light beam. Momentary exposure to a Class 2 laser is not known to be harmful.



**CAUTION**

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.


|      |                                                                                                                             |
|------|-----------------------------------------------------------------------------------------------------------------------------|
| SE55 | Wavelength: 500-570 nm<br>Maximum output: 1 mW<br>Pulse duration: 4 ms<br>Beam divergence: 18 °<br>Repetition rate: 16.7 ms |
|------|-----------------------------------------------------------------------------------------------------------------------------|

2.3.2 LED

Risk Group classified according to IEC 62471:2006 and EN 62471:2008.

|                    |                                                                         |
|--------------------|-------------------------------------------------------------------------|
| SE55 scanner laser | Pulse Duration: Continuous wave (CW)<br>Exempt Group Risk group 0 (RG0) |
|--------------------|-------------------------------------------------------------------------|

2.3.3 Scanner labeling
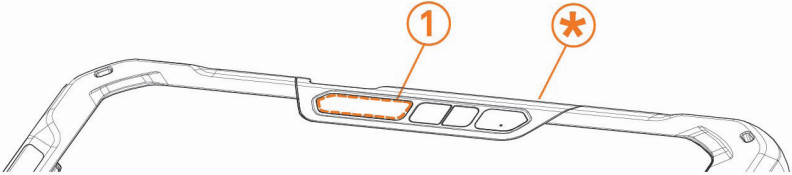
|                                                                                    |                                                                                   |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|  |                                                                                   |
|    |  |
|    | CAUTION: Laser light emitted from this aperture.                                  |

2.4. Batteries



**CAUTION**

Risk of explosion if non-BARTEC approved batteries are used. Dispose of batteries according to instructions. Use only BARTEC approved battery with Type B7-T2Z0-0002..

2.4.1 Battery safety guideline



**IMPORTANT - SAFETY INSTRUCTIONS – SAVE THESE INSTRUCTIONS**

- The battery can only be charged between 0°C and 40°C (32°F and 104°F).
- Do not use incompatible batteries. Use of an incompatible battery may present a risk of fire, explosion, leakage, or other hazard. Do not disassemble or open, crush, bend or deform, puncture, or shred. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
- Severe impact from dropping any battery-operated device could cause the battery to overheat. Do not short circuit a battery or allow metallic or conductive objects to contact the battery terminals. Do not modify, disassemble, or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water, rain, snow or other liquids, or expose to fire, explosion, or other hazard.
- Do not leave or store the equipment in or near areas that might get very hot, such as in a parked vehicle or near a radiator or other heat source. Do not place battery into a microwave oven or dryer.

- To reduce the risk of injury, close supervision is necessary when used near children.
- Please follow local regulations to promptly dispose of used re-chargeable batteries.
- Do not dispose of batteries in fire. Exposure to temperatures over 100 °C (212 °F) may cause explosion.
- Seek medical advice immediately if a battery has been swallowed.
- In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with large amounts of water and seek medical advice.

## 2.5. Regulatory labels

Currently available regulatory labels can be found under Zebra Control Hub --> Help --> (E-Label).

## 3 Device description

### 3.1. BARTEC ET60/65<sup>EX2</sup> Windows Tablet

The BARTEC ET60/65<sup>EX2</sup> is an intrinsically safe Windows tablet approved for hazardous areas. It features a rugged industrial design, the Intel® Core™ Ultra platform, super bright 10.1-inch display, optional integrated barcode scanner, high-resolution cameras, WiFi-6E and optional 5G connectivity.




### 3.2. Purpose of use

The Devices are handheld electrical devices. They serve the purpose of entry, processing and (radio) transmission of data within hazardous areas. The Devices are used exclusively in combination with devices which comply with the requirements placed on the overvoltage category I.

**BARTEC ET60/65<sup>EX2</sup> Windows Tablet, Type B7-T2E\*-\*W\*\*/\*\*\*\*\*\*** have been developed and certified for use in the following hazardous areas:


- ATEX / IECEx: Zone 2 und Zone 22

## 4 Hardware features

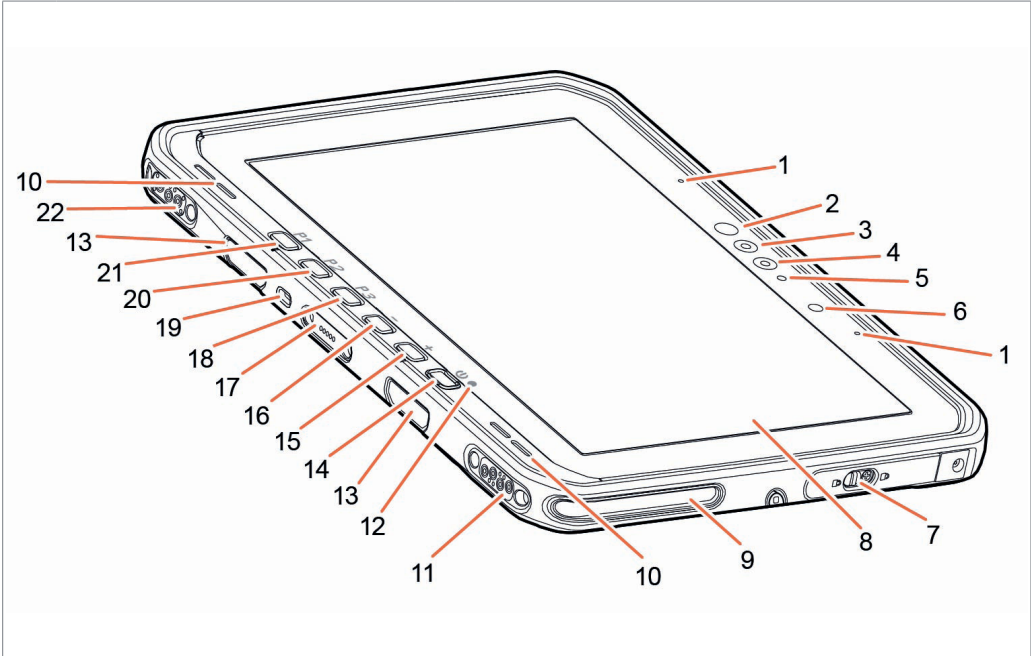


|    |                               |                                                                                          |
|----|-------------------------------|------------------------------------------------------------------------------------------|
| 1  | Front microphones             | Use for voice communications or audio recordings.                                        |
| 2  | Windows Hello infrared LED    | Illuminates your face with infrared (IR) light during Windows Hello face authentication. |
| 3  | Windows Hello infrared camera | Captures your face during Windows Hello face authentication.                             |
| 4  | Front camera                  | Use for video conferencing.                                                              |
| 5  | Front camera LED              | Illuminates when the front camera is active.                                             |
| 6  | Light sensor                  | Determines ambient light for controlling display backlight intensity.                    |
| 7  | Right access door             | Secure door for accessing USB ports.                                                     |
| 8  | Touch screen                  | Displays all information needed to operate the device.                                   |
| 9  | Dock alignment slot           | Assists in aligning the tablet with the dock.                                            |
| 10 | Speakers                      | Provides audio output.                                                                   |
| 11 | Dock USB connector            | Provides USB communication through the dock.                                             |


|    |                                     |                                                                                                              |
|----|-------------------------------------|--------------------------------------------------------------------------------------------------------------|
| 12 | Charging indicator                  | Indicates power state and battery charging status while charging and application-generated notifications.    |
| 13 | Keyboard/shoulder strap mount slots | Provides alignment and mounting of keyboard and shoulder strap clips.                                        |
| 14 | Power button                        | Turns the display on and off. Press and release to turn on the device. Press and hold to restart the device. |
| 15 | + button                            | Programmable button (increase volume – default).                                                             |
| 16 | - button                            | Programmable button (decrease volume – default).                                                             |
| 17 | Keyboard interface connector        | Provides power and communication with the keyboard.                                                          |
| 18 | P3 button                           | Programmable button (keyboard shortcut Ctrl+Alt+Del – default).                                              |
| 19 | Kensington security slot            | Provides mounting a security cable to prevent theft or unauthorized use of the tablet.                       |
| 20 | P2 button                           | Programmable button (opens Copilot application – default).                                                   |
| 21 | P1 button                           | Programmable button (opens Zebra Control Hub application – default).                                         |
| 22 | Dock power / antenna connector      | Provides power and antenna connection through the dock.                                                      |

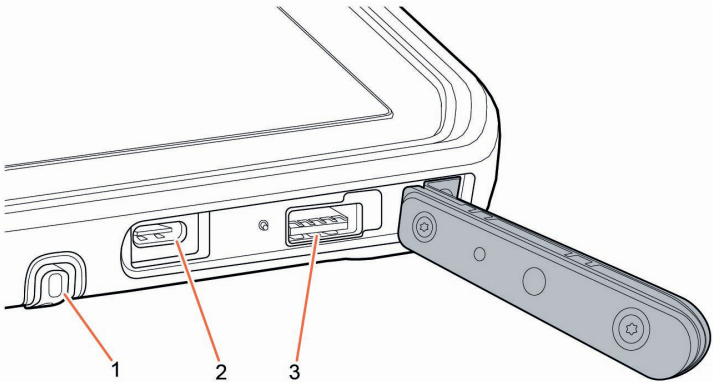

|   |                          |                                                                              |
|---|--------------------------|------------------------------------------------------------------------------|
| 1 | Stylus garage            | Provides a place for holding the stylus.                                     |
| 2 | USB-C Thunderbolt 4 port | Provides communication with a host computer and accessories and charging.    |
| 3 | USB-A 3.1 port           | Provides communication with accessories such as scanners and wired headsets. |

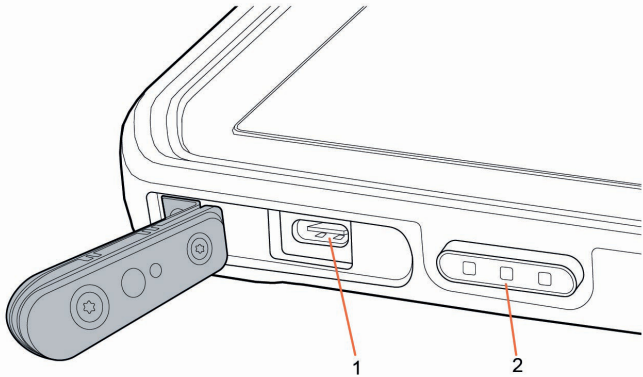

|   |                                                                                                             |                                                                                                                       |
|---|-------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| 1 | USB-C Thunderbolt 4 port                                                                                    | Provides communication with accessories such as scanners.                                                             |
| 2 | Scan button (on tablets with internal scanner)<br>Programmable button (on tablets without internal scanner) | Initiates barcode data capture when a scanenabled application is active.<br>Programmable button (no action - default) |

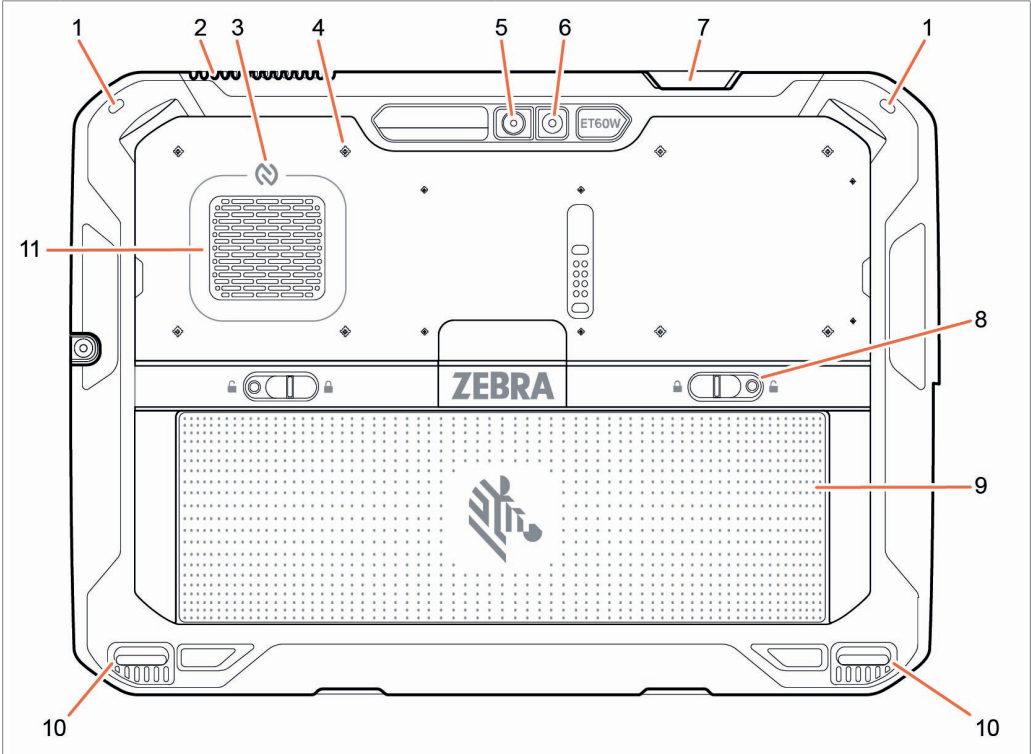

|              |                                 |                                                                                                                           |
|--------------|---------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| 1            | Stylus mount                    | Provides mounting for a stylus tether.                                                                                    |
| 2            | Exhaust vent                    | Provide airflow out of the tablet.                                                                                        |
| 3            | NFC antenna                     | Reads NFC cards.                                                                                                          |
| 4            | Accessory mount point locations | Indicates mounting location points on polymer film for accessory captive screws. CAUTION: Do not remove the polymer film. |
| 5            | Rear camera                     | Autofocus camera that takes photos, and captures barcode data.                                                            |
| 6            | Rear camera LED flash           | Provides illumination for the camera.                                                                                     |
| 7            | Scanner exit window (*)         | Provides data capture using the internal imager.                                                                          |
| 8            | Battery release latches         | Releases the battery.                                                                                                     |
| 9            | Battery                         | Provides power to the tablet.                                                                                             |
| 10           | Dock alignment slot             | Assists in aligning the tablet with the dock.                                                                             |
| 11           | Intake vent                     | Provides airflow into the tablet.                                                                                         |
| (*) optional |                                 |                                                                                                                           |

## 5 Technical data

### 5.1. Explosion protection

#### 5.1.1 BARTEC ET60/65<sup>EX2</sup> Windows Tablet (with scanner)

| ATEX: Zone 2 / Zone 22   |                                                                                                    |
|--------------------------|----------------------------------------------------------------------------------------------------|
| Type B7-T2E2-*W*****K*** | BARTEC ET60/65 <sup>EX2</sup> Windows Tablet                                                       |
| Labelling                | Ⓜ II 3G Ex ic op is IIC T4 Gc<br>Ⓜ II 3D Ex ic op is IIIC T135 °C Dc IP 64<br>-20 °C ≤ Ta ≤ +55 °C |
| Test certificate         | EPS 26 ATEX 1 034 X                                                                                |
| Standards                | see Declaration of Conformity                                                                      |
| IECEx: Zone 2 / Zone 22  |                                                                                                    |
| Type B7-T2E2-*W*****K*** | BARTEC ET60/65 <sup>EX2</sup> Windows Tablet                                                       |
| Labelling                | Ex ic op is IIC T4 Gc<br>Ex ic op is IIIC T135 °C Dc IP 64<br>-20 °C ≤ Ta ≤ +55 °C                 |
| Test certificate         | IECEx EPS 26.0013X                                                                                 |

#### 5.1.2 BARTEC ET60/65<sup>EX2</sup> Windows Tablet (without scanner)

| ATEX: Zone 2 / Zone 22   |                                                                                        |
|--------------------------|----------------------------------------------------------------------------------------|
| Type B7-T2E2-*W*****0*** | BARTEC ET60/65 <sup>EX2</sup> Windows Tablet                                           |
| Labelling                | Ⓜ II 3G Ex ic IIC T4 Gc<br>Ⓜ II 3D Ex ic IIIC T135 °C Dc IP 64<br>-20 °C ≤ Ta ≤ +55 °C |
| Test certificate         | EPS 26 ATEX 1 034 X                                                                    |
| Standards                | see Declaration of Conformity                                                          |
| IECEx: Zone 2 / Zone 22  |                                                                                        |
| Type B7-T2E2-*W*****0*** | BARTEC ET60/65 <sup>EX2</sup> Windows Tablet                                           |
| Labelling                | Ex ic IIC T4 Gc<br>Ex ic IIIC T135 °C Dc IP 64<br>-20 °C ≤ Ta ≤ +55 °C                 |
| Test certificate         | IECEx EPS 26.0013X                                                                     |

**Specific conditions**

for secure operation within the hazardous area

- The battery pack shall be changed or charged only outside hazardous areas.
- Only the battery pack type B7-T220-0002/\*\*\*\* shall be used for ET60<sup>EX2</sup>/ET65<sup>EX2</sup>.
- Connection and disconnection of all external ports, opening the enclosure, or replacing the battery pack while live is only permitted if the potentially explosive atmosphere is shown to be absent.
- The equipment shall be protected from impacts with high impact energy and high electrostatic charge generating processes.
- The manufacturer’s safety instructions shall be respected strictly.

**5.2. Technical specifications**

**5.2.1 Performance characteristics**

|                                                                 |                                 |
|-----------------------------------------------------------------|---------------------------------|
| <b>CPU</b>                                                      | Intel® Core™ Ultra 5 125U       |
| <b>Operating system</b>                                         | Windows® 11 Professional 64-Bit |
| <b>Memory</b>                                                   | 16 GB RAM; 256 GB SSD           |
| <b>SIM card slot</b><br><i>(only BARTEC ET65<sup>EX2</sup>)</i> | 1x eSIM and 1x Nano SIM         |

**5.2.2 Physical characteristics**

|                                                       |                                                                                                                                                                 |
|-------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Dimensions</b><br><i>(Length x Width x Height)</i> | 275 x 199 x 18.3 mm<br>(10.8 x 7.8 x 0.7 inch)                                                                                                                  |
| <b>Weight</b><br><i>(including battery)</i>           | approx. 1,074 g (2.3 lb)                                                                                                                                        |
| <b>Display</b>                                        | 10.1”; 1,000 nits; optically bonded to touchpanel;<br>Contrast Ratio 1000:1<br>Resolution: 1900 x 1200 pixel ; WUXGA                                            |
| <b>Touchpanel</b>                                     | Capacitive multi-touch, Corning® Gorilla® Glass,<br>AI Powered Touch Control for automatic optimization<br>and precise interaction with included passive stylus |
| <b>Sensors</b>                                        | Ambient Light Sensor: Automatically adjusts display<br>brightness<br>Magnetometer: eCompass<br>Motion Sensor: 3-axis gyroscope; 3-axis accelerometer            |

5.2.3 User environment

|                                          |                                      |
|------------------------------------------|--------------------------------------|
| Operating temperature                    | -20 °C to +55 °C (-4 °F to + 131 °F) |
| Charging temperature                     | 0 °C to +40 °C (+32 °F to +104 °F)   |
| Storage temperature<br>(without battery) | -40 °C to +70 °C (-40 °F to +158 °F) |
| Relative humidity                        | 5 % to 95 % (non-condensing)         |
| Class of protection<br>(IEC 60529)       | IP 66                                |

5.2.4 Data transmission Wi-Fi

|                |                                                                                                                                                                                                                                           |
|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Radio standard | IEEE 802.11a, b, d, e, g, h, i, k, n, r, u, v, w, ac, ax, be;<br>Fine Timing Measurement based on 802.11-2016,<br>802.11az HW readiness<br>Up to 5.8 Gbps; 2x2 MU-MIMO; 320 MHz<br>channels; 4096-QAM; 6 GHz, 5 GHz, and 2.4<br>GHz bands |
|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|



**RESTRICTIONS**

The use of 5 GHz RLAN throughout the EEA has the following restrictions: 5.15 - 5.35 GHz is restricted to indoor use only in all member states

|    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|
| BE | BG | CZ | DK | DE | EE | IE |
| EL | ES | FR | HR | IT | CY | LV |
| LT | LU | HU | MT | NL | AT | PL |
| PT | RO | SI | SK | FI | SE | UK |

5.2.5 NFC/HF RFID Reader

|        |                                                                           |
|--------|---------------------------------------------------------------------------|
| NFC/HF | ISO 14443 –A-B, MIFARE, FeliCa®, ISO 15693,<br>NFC Forum Tag Types 1 to 4 |
|--------|---------------------------------------------------------------------------|

5.2.6 Voice and Data transmission Bluetooth

|           |                                                       |
|-----------|-------------------------------------------------------|
| Bluetooth | Bluetooth® 5.4 (Class 1), Bluetooth® Low Energy (BLE) |
|-----------|-------------------------------------------------------|

5.2.7 Data transmission WAN (only **BARTEC ET65<sup>EX2</sup>**)

|                       |                                                                                                                                                                                                                                                                                         |
|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Radio frequency bands | <b>5G NR</b> (n1/2/3/5/7/8/12/13/14/18/20/25/26/28/29/30/38/40/41/48/66/70/71/75/76/77/78/79)<br><b>LTE-FDD</b> (B1/2/3/4/5/7/8/12/13/14/17/18/19/20/25/26/28/29/30/32/66/71)<br><b>LTE-TDD</b> (B34/38/39/40/41/42/43/48)<br><b>LTE-LAA</b> (B46)<br><b>UMTS WCDMA</b> (B1/2/4/5/8/19) |
|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

5.2.8 Global Navigation Satellite System (GNSS; only **BARTEC ET65<sup>EX2</sup>**)

|      |                                           |
|------|-------------------------------------------|
| GNSS | GPS, GLONASS, BDS (BeiDou), Galileo, QZSS |
|------|-------------------------------------------|

5.2.9 Barcode capture (optional, only Type **B7-T2E3-W\*\*\*\*\*K\*\*\***)

|         |                                                                     |
|---------|---------------------------------------------------------------------|
| Scanner | SE55 1D/2D Advanced Range Scan Engine with IntelliFocus™ technology |
|---------|---------------------------------------------------------------------|



The scanning range depends on the barcode type, size, and the print quality. See the data sheet for the list of supported barcodes/symbologies.

### 5.3. Battery



The life of the battery will depend on different factors including user behavior (e.g. app usage, video playback), device settings (e.g. screen brightness), ambient temperature, and more.


|                                            |                                                                                                   |
|--------------------------------------------|---------------------------------------------------------------------------------------------------|
| <b>Battery</b><br><i>Type B7-T2Z0-0002</i> | (only change and charge outside hazardous areas)<br>Lithium-ion battery 7.6 V/4460 mAh (33.90 Wh) |
| <b>Operating temperature</b>               | -20 °C to +55 °C ( -4 °F to + 131 °F)                                                             |
| <b>Charging temperature</b>                | 0 °C to +40 °C (+32 °F to +104 °F)                                                                |
| <b>Storage temperature</b>                 | -40 °C to +70 °C (-40 °F to +158 °F)                                                              |
| <b>Relative humidity</b>                   | 5 % to 95 % (non-condensing)                                                                      |
| <b>UN38.3 compliant</b>                    | Yes                                                                                               |



Charge batteries in ambient temperatures from 0°C to 45°C (32°F to 113°F). The device always performs battery charging in a safe and intelligent manner. At higher temperatures (for example, approximately +37°C (+98°F)), the device may, for small periods of time, alternately enable and disable battery charging to keep the battery at acceptable temperatures. The device indicates when charging is disabled due to abnormal temperatures via its LED.


5.4. Device labelling

5.4.1 BARTEC ET60/65<sup>EX2</sup> Windows Tablet (with scanner)

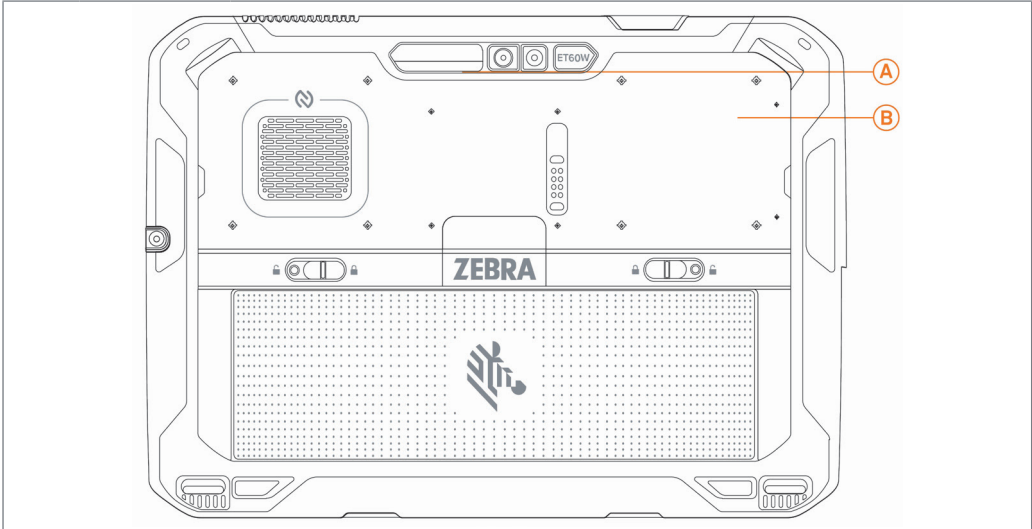


|              |                                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------|-------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>A</div> | <p>Laser warning</p>                                        | <div><div>LASER LIGHT - DO NOT STARE INTO BEAM. CLASS 2 LASER PRODUCT.<br/>LUMIÈRE LASER - NE PAS REGARDER DANS LE FAISCEAU.PRODUIT<br/>LASER DE CLASSE 2. 500-570 nm 1 mW 4 ms<br/>激光辐射 勿直视光束 2类激光产品</div><div></div><div>Complies with 21CFR1040.10 &amp; 1040.11 except for deviations pursuant to Laser Notice No. 56, dated May 8, 2019 and IEC/EN 60825-1:2014.</div></div>                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <div>B</div> | <p>Marking<br/>(here<br/>BARTEC<br/>ET60<sup>EX2</sup>)</p> | <div><div><b>BARTEC</b><br/>Max-Eyth-Strasse 16<br/>97980 Bad Mergentheim / Germany</div><div><b>BARTEC ET60<sup>EX2</sup> Windows Tablet</b><br/><b>Type B7-T2E2-0W0C5DPSK000</b><br/><b>EPS 26 ATEX 1 034 X</b><br/> <b>II 3G Ex ic op is IIC T4 Gc</b><br/><b>II 3D Ex ic op is IIIC T135 °C Dc IP 64</b><br/><b>IECEx EPS 26.0013X</b><br/><b>-20° ≤ Ta ≤ +55°C</b><br/><b>WARNING - EXPLOSION HAZARD.</b><br/><b>TO PREVENT IGNITION OF A HAZARDOUS</b><br/><b>ATMOSPHERE, BATTERIES MUST ONLY BE</b><br/><b>CHANGED OR CHARGED IN AN AREA KNOWN</b><br/><b>TO BE NON-HAZARDOUS. REPLACE BATTERY</b><br/><b>WITH BATTERY TYPE B7-T2Z0-0002.</b><br/><b>READ QUICK START GUIDE B1-T2E0-7E0003</b><br/><b>BEFORE USE!</b></div></div> |

5.4.2 BARTEC ET60/65<sup>EX2</sup> Windows Tablet (without scanner)
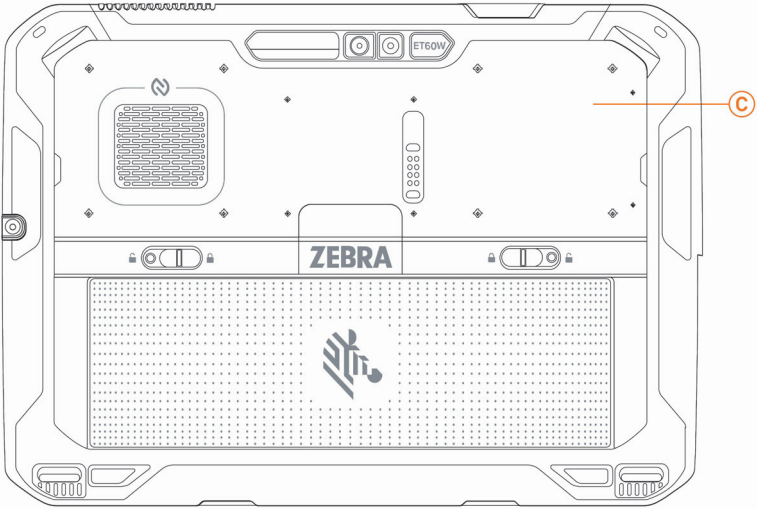
|                                                                                   |                                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |                                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|   | <p>Marking<br/>(here<br/>BARTEC<br/>ET60<sup>EX2</sup>)</p> | <p><b>BARTEC</b><br/>Max-Eyth-Strasse 16<br/>97980 Bad Mergentheim / Germany</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|                                                                                   |                                                             | <p><b>BARTEC ET60<sup>EX2</sup> Windows Tablet</b><br/><b>Type B7-T2E2-0W0C5DPS0000</b></p> <p><b>EPS 26 ATEX 1 034 X</b><br/> <b>II 3G Ex ic IIC T4 Gc</b><br/><b>II 3D Ex ic IIIC T135 °C Dc IP 64</b><br/><b>IECEx EPS 26.0013X</b></p> <p><b>-20° ≤ Ta ≤ +55°C</b></p> <p><b>WARNING - EXPLOSION HAZARD.</b><br/><b>TO PREVENT IGNITION OF A HAZARDOUS</b><br/><b>ATMOSPHERE, BATTERIES MUST ONLY BE</b><br/><b>CHANGED OR CHARGED IN AN AREA KNOWN</b><br/><b>TO BE NON-HAZARDOUS. REPLACE BATTERY</b><br/><b>WITH BATTERY TYPE B7-T2Z0-0002.</b><br/><b>READ QUICK START GUIDE B1-T2E0-7E0003</b><br/><b>BEFORE USE!</b></p> |

5.4.4 Battery

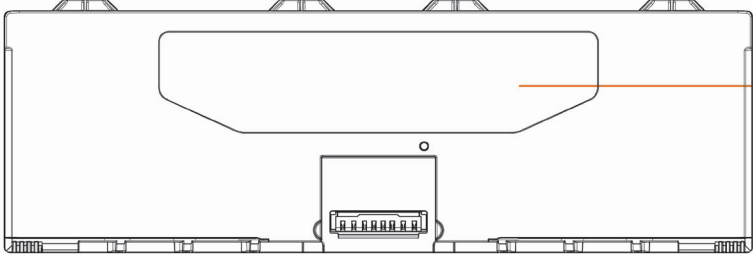

**Battery marking**

**BARTEC** Max-Eyth-Strasse 16  
37859 Bad Mergentheim  
Germany  
Battery - Type B7-T2E0-0002  
for use with BARTEC ET60/65<sup>EX2</sup> Windows Tablet  
Type B7-T2E0-0002

Model 名称: B7-0004H Typ: 4400mAh/33.00Wh 2C/2000000  
充电时间: 3.5h Min. 充电容量: 4400mAh 额定容量: 33.44Wh  
RECHARGEABLE (7.6V) LITHION BATTERY 二次可充电锂电池/锂离子电池  
Factory: TWS TECHNOLOGY GUANGZHOU LIMITED 广州德通电子科技有限公司  
制造商/生产厂: 广州德通电子科技有限公司 中国制造 中国制造 9 号社

CAUTION: Risk of Explosion if battery is replaced by an incorrect type. Dispose of used batteries according to instructions.  
WARNING: Do not disassemble, short circuit, or dispose of in fire.  
警告: 禁止拆解、短接、抛掷。请勿将废电池投入火中, 应按照国家规定, 切勿随意丢弃。应放置于高温环境中, 避免在高温使用。如果电池被火点燃, 可能会导致爆炸并造成伤害及财产损失。请按照国家规定的程序处理电池。

IS 16046 (Part 2): 2018/  
IEC 62133-2: 2017

PowerPrecision  
R-41155640  
www.bis.gov.in

DESIGNED FOR  
**ZEBRA**  
ZEBRA TECHNOLOGIES CORP.  
HOLTSVILLE, NY 11742  
Patents: ip.zebra.com

SN: T0001  
MFD: 19FEB26  
Cell Origin: China / Finished in: China

EU Importer: Zebra Technologies B.V.  
Address: Mercurius 12, 3448 DX Heerhooftwoud,  
Netherlands

## 6 Transport and storage

### 6.1. Transport



Report any transport damage or incomplete deliveries immediately after receipt in writing to the forwarding company and BARTEC.  
Any damage caused through incorrect storage shall not be covered by the warranty provisions of BARTEC.



Battery conforms to UN38.3.  
Due to the transport guidelines for air freight, all batteries are delivered Ex Works charged to max. 30%.  
Further information, such as material safety data sheets, can be found on [bartec.com](http://bartec.com)

### 6.2. Storage



#### ATTENTION

#### **Property damage through incorrect storage!**

- ▶ Observe storage temperatures.
- ▶ Keep humidity away from the Device and batteries.

#### ATTENTION

#### ***Dommages matériels dus à un stockage inapproprié !***

- ▶ *Respecter les températures de stockage.*
- ▶ *Tenir l'appareil à l'abri de l'humidité.*

#### **Additional information on the battery**

The Device battery (Type B7-T2Z0-0002) is developed and manufactured in accordance with the highest industrial standards. The operating time or storage period of a battery is restricted, however. The actual life of the battery is influenced by different factors, e.g. hot, cold, rough operating environment, and severe impact. If the battery is stored longer than six months, the performance may be impaired on a permanent basis.

When storing batteries for 6 months or longer, the charge level should be verified at least every 3 months and charged to at least 50%.

## 7 Commissioning and operation



### **DANGER**

**Avoid electrostatic charging in hazardous areas.**

**Danger to life in explosive atmosphere!**

- ▶ Do not dry wipe or clean the Device with chemical cleaning agents
- ▶ Wear suitable clothing and shoes
- ▶ Do not use rubber gloves or similar

### **DANGER**

***Dans les zones à risque d'explosion, éviter les charges électrostatiques.***

***Une atmosphère explosive présente un danger de mort!***

- ▶ *Ne pas essuyer ou nettoyer l'appareil avec des produits de nettoyage chimiques*
- ▶ *Porter des vêtements et des chaussures appropriés*
- ▶ *Ne pas utiliser de gants en caoutchouc ou similaire*



### **DANGER**

**Unintended use endangers explosion protection.**

**Danger to life in explosive atmosphere!**

- ▶ Do not make any modifications to the Device
- ▶ In the case of function disturbances or damage to the enclosure and/or display, the Device should be immediately removed from the hazardous area. Once in the safe area, the battery should be removed from the Device.

### **DANGER**

***Une utilisation non conforme met en danger la protection contre les explosions.***

***Une atmosphère explosive présente un danger de mort!***

- ▶ *Ne pas effectuer de modification sur l'appareil*
- ▶ *En cas de dysfonctionnement ou d'endommagement du boîtier et/ou l'écran, le matériel doit être immédiatement déplacé de la zone à risque d'explosion. Une fois dans la zone sûre, la batterie doit être retirée de l'appareil.*

**DANGER****Non certified accessories endanger explosion protection.****Danger to life exists in hazardous areas!**

- ▶ Only use original accessories from BARTEC
- ▶ Only permitted outside the hazardous area:
  - Inserting or replacing Nano SIM card
  - Inserting, changing or charging the battery
  - Attaching or removing accessories

**DANGER*****Les accessoires non certifiés mettent en danger la protection contre les explosions.******Les zones à risque d'explosion présentent un danger de mort!***

- ▶ *N'utilisez que des accessoires originaux de BARTEC*
- ▶ *Autorisé uniquement en dehors de la zone à risque d'explosion :*
  - Insérer/remplacer les carte Nano SIM
  - Insérer/charger la batterie
  - Fixer/retirer les accessoires

**WARNING – EXPLOSION HAZARD**

The battery lock screw and the I/O port cover lock screw must be engaged when the device is used in hazardous locations.

**AVERTISSEMENT – RISQUE D'EXPLOSION**

*La vis de verrouillage de la batterie et la vis de verrouillage du cache du port I/O doivent être engagées lorsque l'appareil est utilisé dans des zones dangereuses.*

## 7.1. Handling in hazardous areas

### Device

- The Device may not be tampered with
- The battery may not be removed from the Device
- Protect the Device from impact
- Do not expose the Device to caustic/aggressive liquids, vapours, and/or mists
- Avoid exposing the Device to liquid and dust outside the specified IP rating
- Do not operate the Device outside the specified temperature range

### Battery

- The battery may not be tampered with
- Only charge batteries (Type B7-T2Z0-0002) outside hazardous areas
- Defective batteries must not be used and should without delay be disposed of according to local regulations
- The battery may explode if it catches fire

- **Accessories**
- Only install or replace accessories outside the hazardous area
- Only use accessories that have been tested and certified by BARTEC for use in the hazardous areas

7.2. First steps

- ▶ Unpack the Device and battery
- ▶ Insert Nano SIM card, if using one (see chapter [7.3. Inserting a Nano SIM card](#))
- ▶ Charge the battery to 100% after unpacking. The battery may be charged by inserting it into the Device and charging it using the power supply (see chapter [7.6. Charging the Device/the battery](#)) or the battery may be charged separately using a 2-slot battery charging station (see chapter [7.6. Charging the Device/the battery](#)).

| Charging accessory                                          | Suitable for             |               |
|-------------------------------------------------------------|--------------------------|---------------|
|                                                             | Device<br>(with battery) | Spare battery |
| <b>Power supply</b><br>Type G7-T0Z0-0001                    | Yes                      | No            |
| <b>2-slot battery charging station</b><br>Type G7-T0Z0-0002 | No                       | Yes           |

- ▶ If the battery was charged separately, insert it into the Device
- ▶ Switch on the Device

Optional:

- ▶ Apply Screen protector (Type B7-T2Z0-0011)
- ▶ Attach Kickstand (Type B7-T2Z0-0003)
- ▶ Attach Leather carry case (Type B7-T2Z0-0012), Holder for stylus (Type B7-T2Z0-0009) and Stylus (Type 17-S1Z0-0008 or B7-T2Z0-0014)

### 7.3. Inserting a Nano SIM card (only BARTEC ET65<sup>EX2</sup>)

The nano SIM card is required for cellular data connectivity.



#### CAUTION

Follow proper electrostatic discharge (ESD) precautions to avoid damaging the SIM card.


Proper ESD precautions include but are not limited to, working on an ESD mat and ensuring that the user is properly grounded.




Nano SIM cards do not need to be certified or tested for use in hazardous areas and may be purchased through third parties.

#### Work steps:


1. Slide the battery release latches toward the sides of the tablet. The battery ejects slightly.

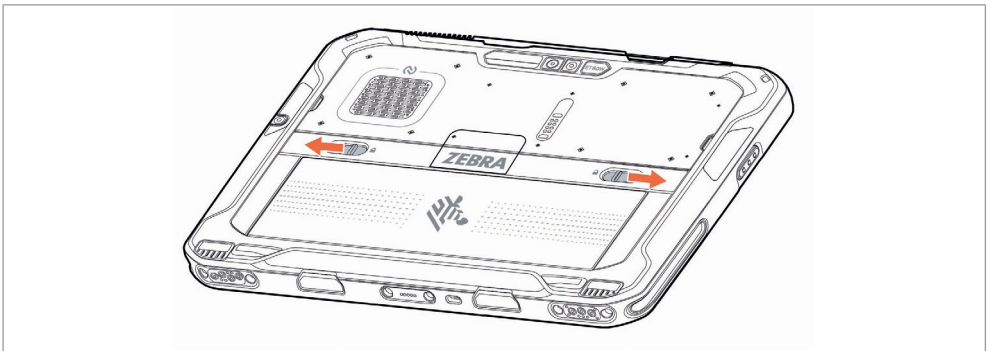

2. Lift the battery out of the tablet.

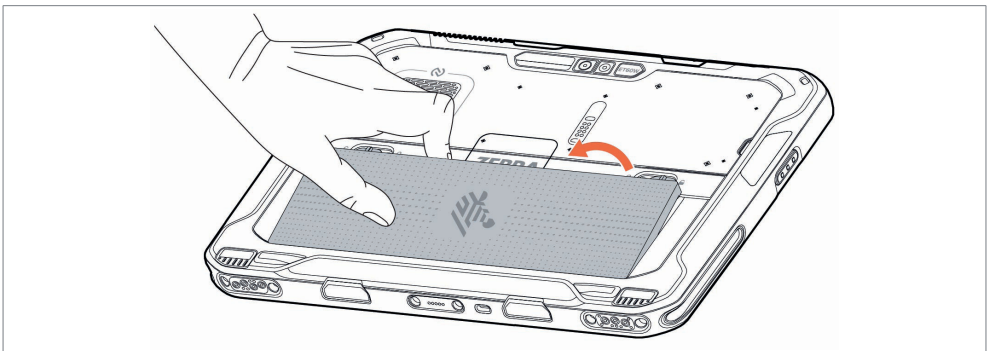


3. Lift the SIM cover.

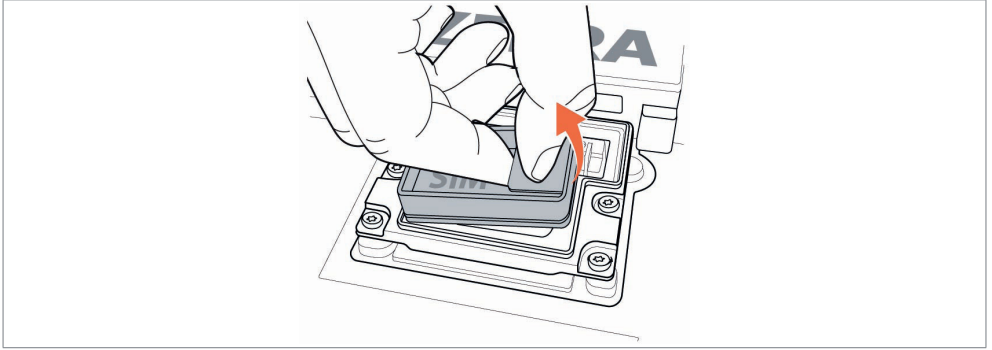


4. Slide the SIM holder to the unlock position.


5. Open the SIM holder.

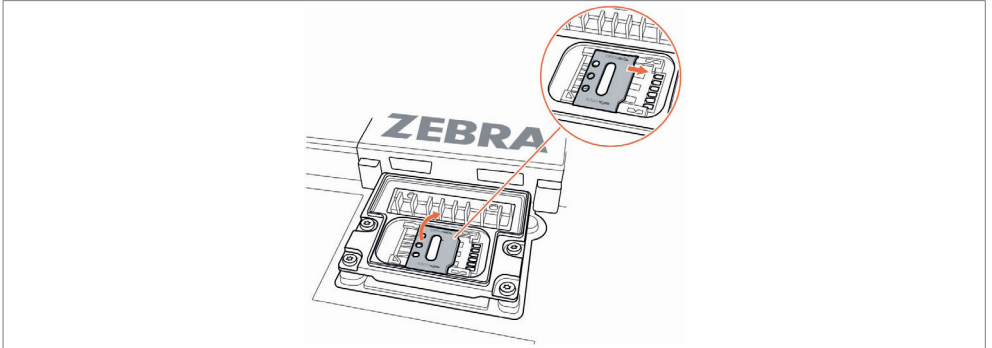


6. Place the SIM card face down.

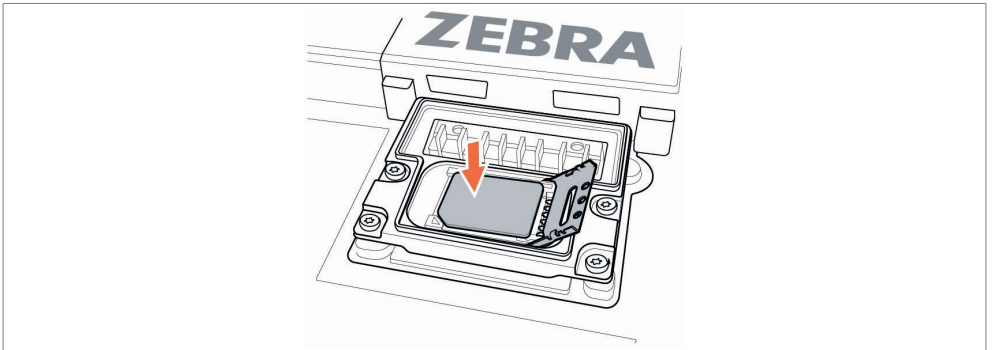


7. Close the SIM door.

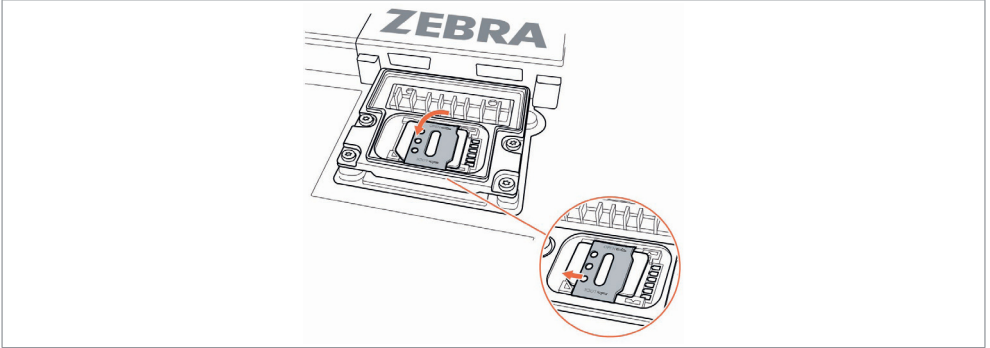

8. Slide the SIM holder to the lock position.  
9. Replace the SIM cover.

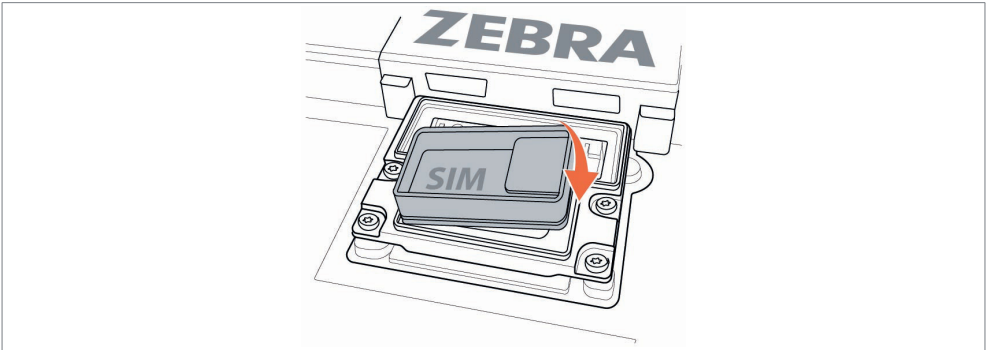

10. Insert the battery, bottom first, into the battery compartment at the back of the device.

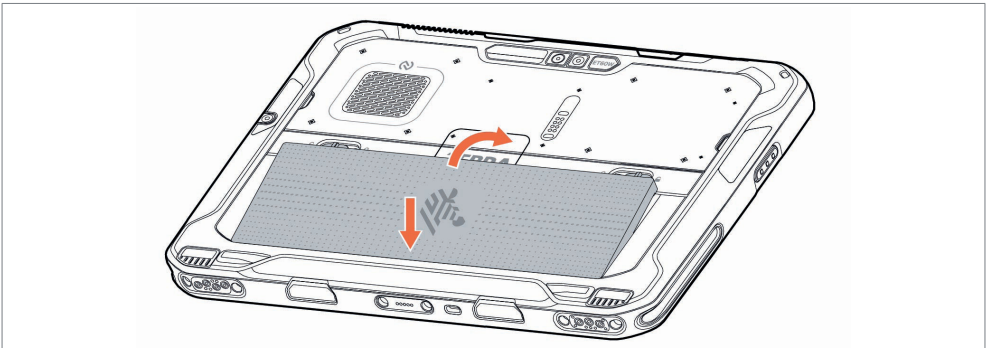

11. Press the battery down into the compartment until the release latches snap into place.  
12. After inserting the battery, ensure that the lock screws are used (see chapter [7.5. Using Lock Screws in hazardous areas](#)).

## 7.4. Replacing the Battery


This section describes how to replace the battery in the tablet.




With Hot Swap mode, when the user removes the battery, the display dims. Replace the battery within 60 seconds to preserve memory persistence.

### Work steps:


1. Slide the battery release latches toward the sides of the tablet. The battery ejects slightly.

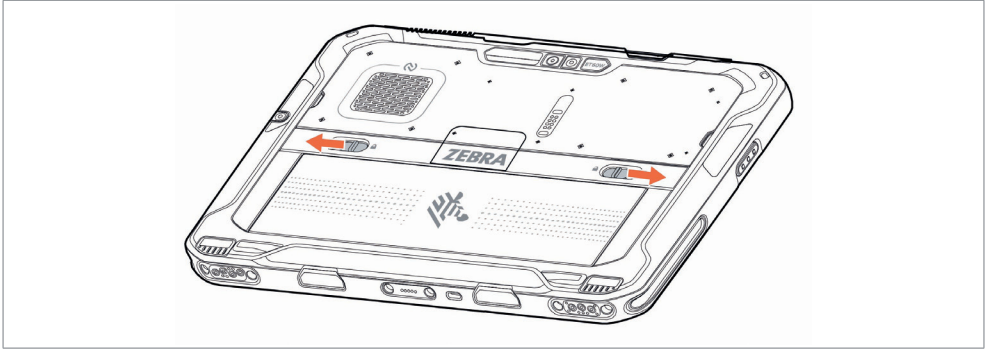

2. Lift the battery out of the tablet.

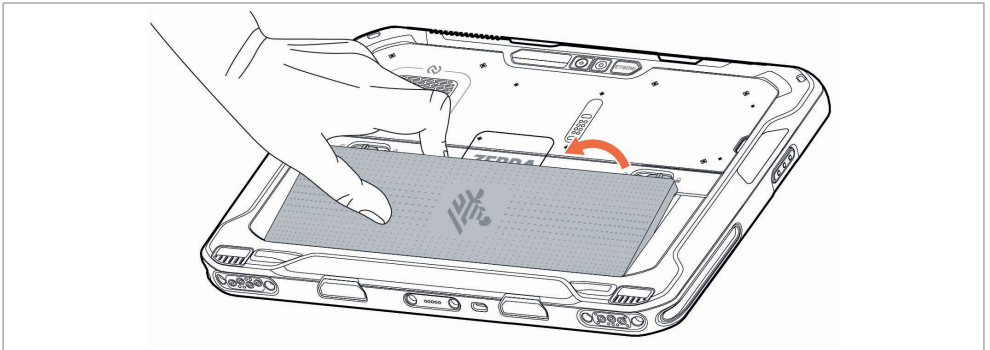

3. Insert the replacement battery, bottom first, into the battery compartment at the back of the device.

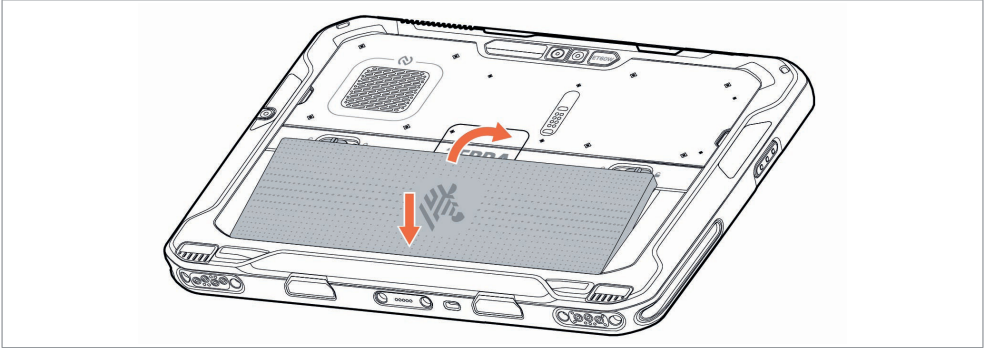

4. Press the battery down into the compartment until the release latches snap into place.
5. After inserting the battery, ensure that the lock screws are used as described in chapter 7.5. Using Lock Screws in hazardous areas.
6. Press the Power button.

## 7.5. Using Lock Screws in hazardous areas

### WARNING – EXPLOSION HAZARD


The battery lock screw and the I/O port cover lock screw must be engaged when the device is used in hazardous locations.





### AVERTISSEMENT – RISQUE D'EXPLOSION

*La vis de verrouillage de la batterie et la vis de verrouillage du cache du port I/O doivent être engagées lorsque l'appareil est utilisé dans des zones dangereuses.*

1. Align two Torx screws (M2x3) with the battery release latches and tighten the screws using a Torx screwdriver (torque: 0.25 Nm).

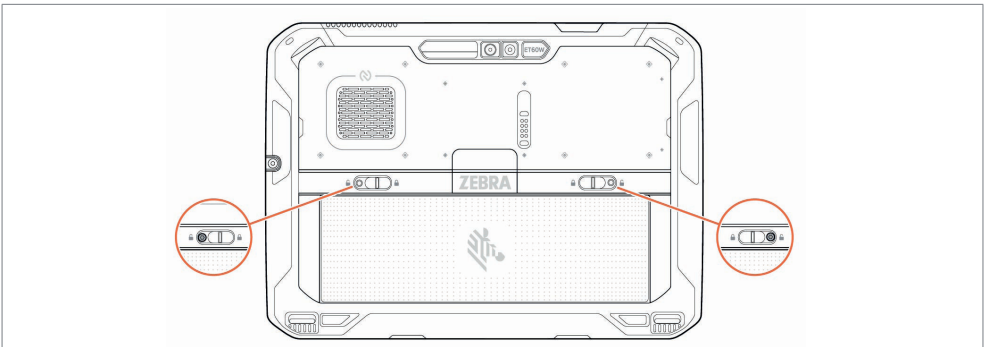


2. Align the Torx screws (M1x2) with the openings on the left and right I/O ports and tighten the screws using a Torx screwdriver (torque: 0.25 Nm).

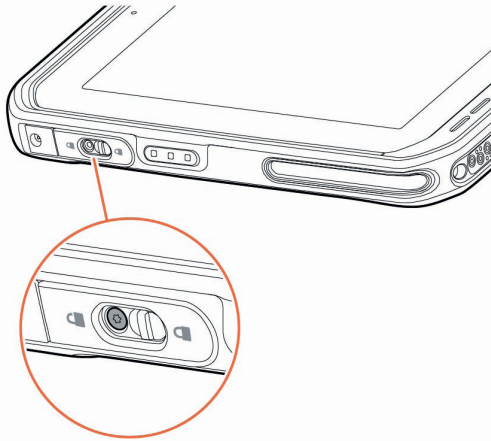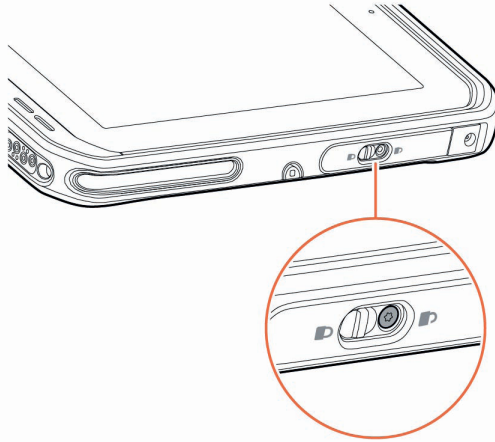

## 7.6. Charging the Device/the battery

The battery charges from 4% to 80% in approximately 2.5 hours.  
Charge batteries at room temperature with the device in sleep mode.

### 7.6.1 Charging the Device with the power supply

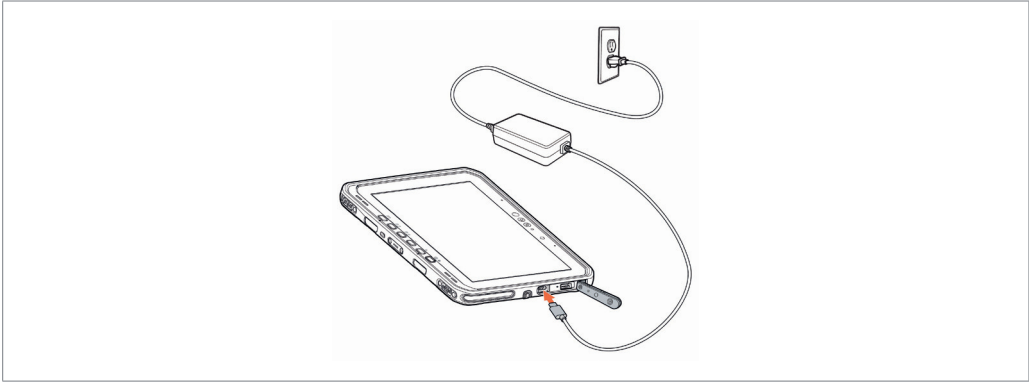


### 7.6.2 Battery status/charge LED indicator of the Device

| Status      | Description                                                               |
|-------------|---------------------------------------------------------------------------|
| Off         | Power is not supplied to the device.                                      |
| Solid Amber | The device is charging.                                                   |
| Solid Red   | The device is charging, but the battery is at the end of its useful life. |
| Solid Green | The device is fully charged.                                              |
| Solid Blue  | A battery-free tablet is connected to external power.                     |

7.6.3 Charging the battery with the 2-slot battery charging station

Use the 2-slot battery charging station to charge up to two batteries.

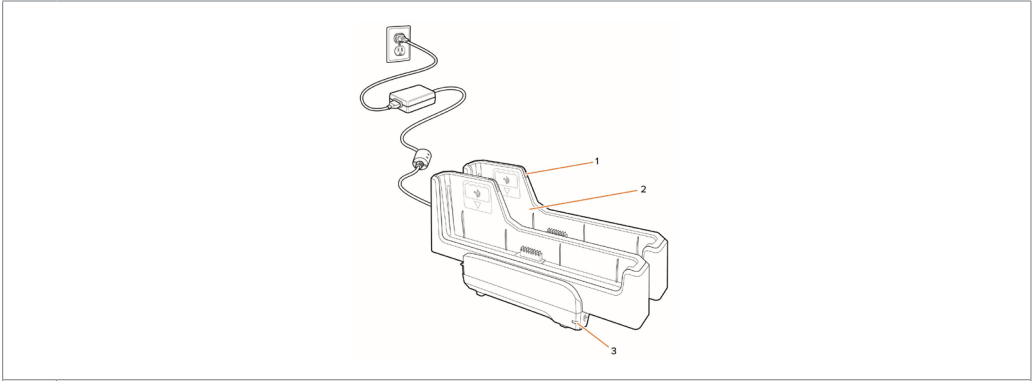

|   |                    |
|---|--------------------|
| 1 | Battery Charge LED |
| 2 | Battery slot       |
| 3 | Power LED          |

7.6.4 Battery status/charge LED indicator

| Status                              | Description                                                                                                                                        |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| Solid Amber                         | The battery is charging.                                                                                                                           |
| Solid Green                         | The battery charging is complete.                                                                                                                  |
| Solid Red                           | The battery is charging, and the battery is at the end of its useful life. Charging is complete, and the battery is at the end of its useful life. |
| Fast Blinking Red (2 blinks/second) | Error in charging; check the placement of the battery and battery at the end of its useful life.                                                   |
| Off                                 | No battery in the slot. The battery is not placed in the slot correctly. The charger is not powered.                                               |


## 7.7. Using the Camera

Use the front or rear camera to take a photo or record a video.



If using the front camera, move the front camera privacy switch to the open position.


1. Open the Camera app.
2. Point the rear camera at an object.
3. Touch the on-screen shutter button to take a photo or record a video.

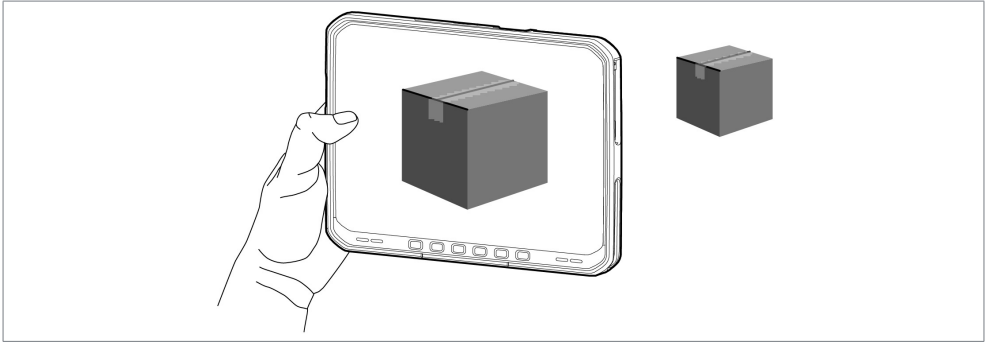

## 7.8. Reading NFC cards

The Device supports reading NFC cards. The NFC antenna is located on the back of the tablet under the NFC logo.

With an NFC-enabled application open, bring the NFC card toward the antenna. Depending upon the application, an audio or visual indication indicates a successful reading of the card.

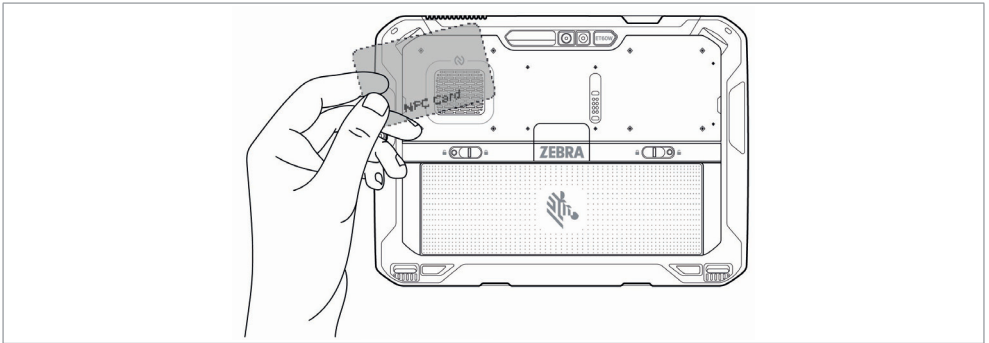


## 7.9. Scanning with the scanner (optional, with Type B7-T2E3-\*W\*\*\*\*\*K\*\*\*)

Use the internal imager to capture barcode data.




Use the Zebra 123Scan Utility to configure the scanner.  
Can be found in the [Enterprise Mobility Support Portal](https://em-support.bartec.com/en/support/solutions/articles/266612-zebra-123-scan-utility):  
BARTEC ET60/65<sup>EX2</sup> Windows Tablet > Software > Zebra 123Scan Utility  
[em-support.bartec.com/en/support/solutions/articles/266612-zebra-123-scan-utility](https://em-support.bartec.com/en/support/solutions/articles/266612-zebra-123-scan-utility)

1. Ensure that an app is open on the device, and a text field is in focus (the text cursor is in the text field).
2. Point the exit window of the device at a barcode.
3. Press and hold the scan button. The aiming dot with illumination turns on to assist in aiming.

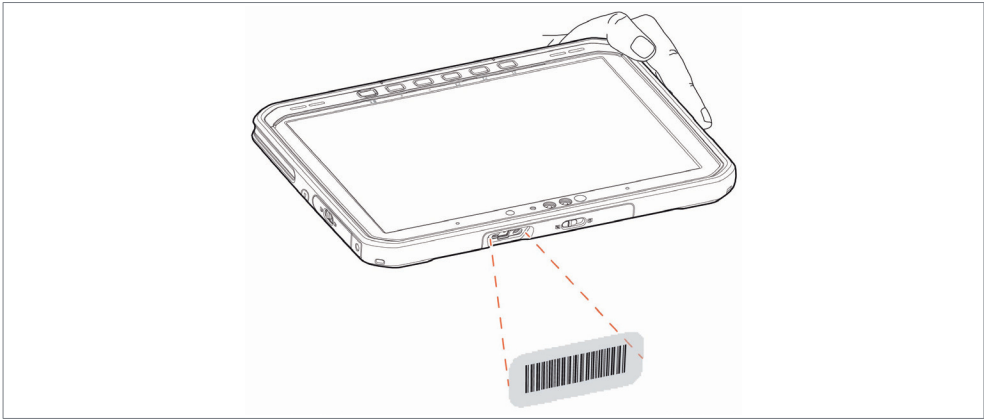

4. Ensure the barcode is within the area formed by the aiming pattern. The aiming dot is used for increased visibility in bright lighting conditions.

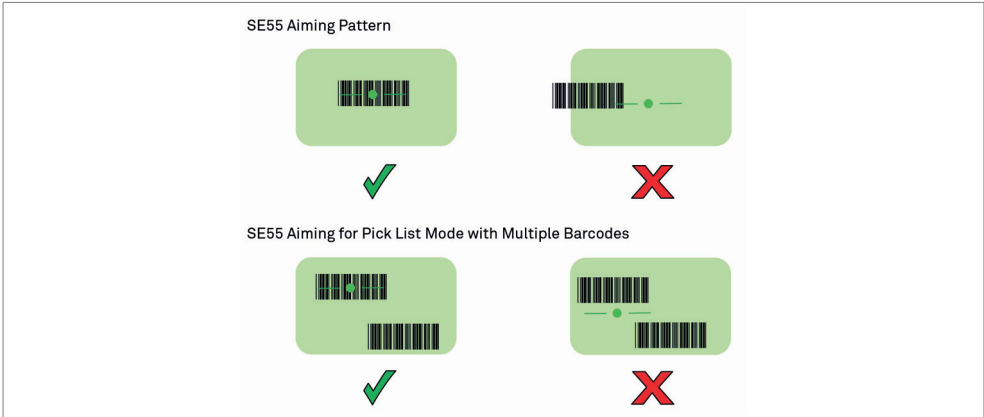



When the device is in Pick List Mode, the device does not decode the barcode until the center of the crosshair touches the barcode.

5. A beep sounds, by default, to indicate the barcode was decoded successfully.
6. Release the scan button.
7. The captured data displays in the text field.

## 8 Troubleshooting

This section provides information for resetting and troubleshooting the Device. There are five reset functions:

- ▶ Restarting the Device
- ▶ System properties revert to a previous point in time
- ▶ Factory Reset via Recovery
- ▶ New installation of operating system



Detailed information on how to perform the various reset options can be found in the [Enterprise Mobility Support Portal](https://em-support.bartec.com/en/support/solutions/folders/279278):  
BARTEC ET60/65<sup>EX2</sup> Windows Tablet > Troubleshooting  
[em-support.bartec.com/en/support/solutions/folders/279278](https://em-support.bartec.com/en/support/solutions/folders/279278)

### 8.1. Restarting the Device

If the device is running slow or some applications are not functioning properly, restart the device.

1. Touch “Start”.



2. Touch “Power”.



3. Select “Restart”.
4. The device shuts down and restarts.

## 8.2. System properties revert to a previous point in time

A Windows restore point saves the current state of your system settings, drivers, and programs. It allows you to restore your PC to a previous, working state in the event of errors or after faulty updates. Your personal files (documents, pictures) remain intact.

1. Open the search bar.
2. Type “System Properties” and press Enter.  
The “System Properties” window will appear.
3. Select the “System Protection” tab.  
Configure your protection settings.  
By default, this feature is turned off.

## 8.3. Factory Reset via Recovery

A factory reset restores Windows to the original factory settings.

1. Connect the Device to a power source.
2. Touch the notification area on the taskbar.



3. Touch “Settings”.



4. Touch “System” and select “Recovery”.
5. Touch “Reset PC”.
6. Touch “Keep my files” to remove all apps and settings but keep all personal files  
or  
Touch “Remove everything” to remove all personal files, apps, and settings.



### CAUTION

Removing everything erases all data, including your account configuration, applications, music, pictures, and files. Make sure that you back up all the required data before you proceed.

7. Touch “Next”.
8. Select “Cloud download” or “Local reinstall”.
9. Touch “Next”.

The process can take an hour or longer. When the reset is complete, the Windows setup process begins.

## 8.4. New installation of operating system

If none of the previous options worked, you can reinstall the operating system.



### WARNING

A new installation will delete all settings and data.

The procedure is described in the Zebra Knowledge Center:

Installing the complete operating system image for Windows 11 Professional

<https://support.zebra.com/article/000031505?language=de&redirect=false>

## 9 Disposal



The Devices and accessories contains metallic and plastic parts and electronic components.

WEEE registration number of the BARTEC GmbH:  
DE 95940350



BARTEC devices are intended exclusively for commercial use (so-called B2B devices) in accordance with the WEEE Directive. The WEEE Directive provides the framework for the treatment of old electrical equipment throughout Europe. This means that you may not dispose of BARTEC devices together with usual household waste but rather separately in an environmentally compatible manner. BARTEC devices can also be brought to the collection points of public disposal companies. Alternatively, all products purchased from BARTEC can be returned to BARTEC for disposal. BARTEC will ensure disposal in accordance with the applicable laws. The sender shall bear the costs of packaging and shipping.

## **BARTEC**

BARTEC GmbH  
Max-Eyth-Str. 16  
97980 Bad Mergentheim  
Germany

Phone: +49 7931 597 0  
[info@bartec.com](mailto:info@bartec.com)

[bartec.com](http://bartec.com)